# **Installation Guide Attic Hatch**



Time of installation: Watch humidity at construction side!

Only install attic stairs when standard climate has been established.

#### Always install attic hatch without stairs.

Annually inspect in order to ensure that all screws and nuts, except for those at the rotation points of the levers, are tightened securely. Make sure to lubricate all joints / rotation points with oil once a year.





Concertina: Liliput In case of Liliput with comfort operation pay attention: Installation guide Liliput comfort operation





When installation is completed, **check tight closing of the hatch door** and fine tune the factory setted spring tension if necessary (nut at ringscrew). Springs are under tension!

Therefore only adjust from above with hatch door closed.

Note cladding: thickness maximum 20 mm, use longer ring eye screw; distributed load maximum 10 kg/m<sup>2</sup>; gap width between hatch door and frame minimum 3.5 mm. Hatch door > 1 m<sup>2</sup> use stronger springs.



For over 20 years, Ecological Building Systems has been at the forefront of environmental and sustainable building products supplying a range of innovative airtightness solutions and natural insulations backed up with expert technical support.

As product suppliers in the UK and Ireland, we're happy to assist you with your projects and have expert technical and sales advice on hand.



### Call us

Great Britain +44 (0)1228 711511 Ireland +353 46 9432104



## Email us

info@ecologicalbuildingsystems.com



#### Find us

Great Britain Ecological Building Systems UK Ltd., Cardewlees, Carlisle, Cumbria, CA5 6LF, United Kingdom

Ireland Ecological Building Systems Ltd., Main Street, Athboy. Co. Meath, C15 Y678, Republic of Ireland



Discover our solutions online at ecologicalbuildingsystems.com