


Installation Guide Guardrail

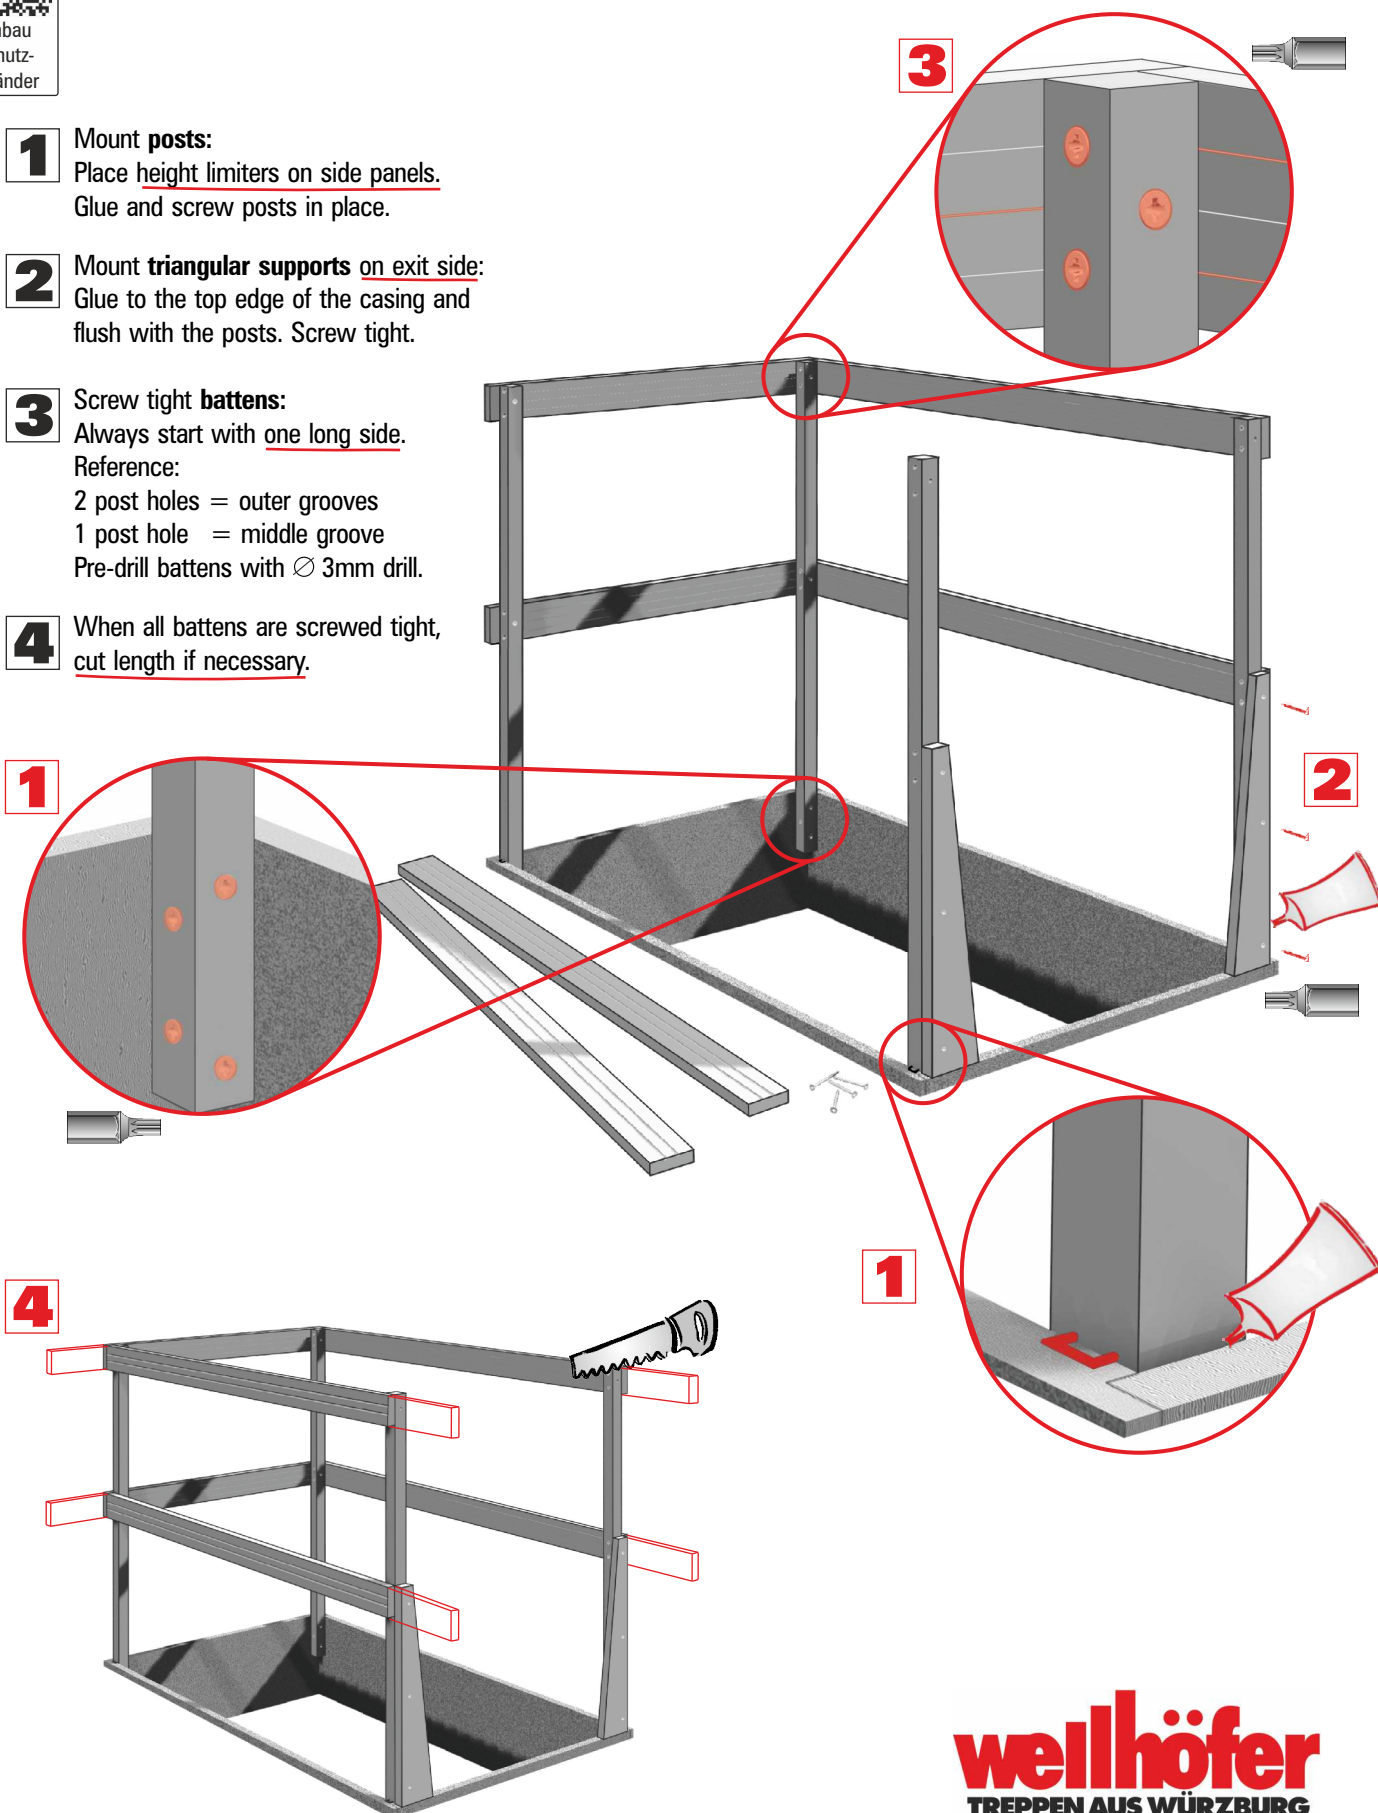

- 1** Mount **posts**:
Place height limiters on side panels.
Glue and screw posts in place.
- 2** Mount **triangular supports** on exit side:
Glue to the top edge of the casing and flush with the posts. Screw tight.
- 3** Screw tight **battens**:
Always start with one long side.
Reference:
2 post holes = outer grooves
1 post hole = middle groove
Pre-drill battens with \varnothing 3mm drill.
- 4** When all battens are screwed tight, cut length if necessary.



For over 20 years, Ecological Building Systems has been at the forefront of environmental and sustainable building products supplying a range of innovative airtightness solutions and natural insulations backed up with expert technical support.

As product suppliers in the UK and Ireland, we're happy to assist you with your projects and have expert technical and sales advice on hand.



Call us

Great Britain +44 (0)1228 711511

Ireland +353 46 9432104



Email us

info@ecologicalbuildingsystems.com



Find us

Great Britain Ecological Building Systems UK Ltd.,
Cardewlees, Carlisle, Cumbria, CA5 6LF,
United Kingdom

Ireland Ecological Building Systems Ltd.,
Main Street, Athboy. Co. Meath, C15 Y678,
Republic of Ireland